



Work Required
 Remove Part of Culvert Headwalls.
 Plug Ends of Culvert.
 Build New Headwall for Roadway Drainage.

Estimated Quantities
 Excavation for Structure 2.0 Cu Yds.
 Concrete Class C 3.3 Cu Yds.
 Channel Excavation 5.0 Cu Yds.
 Remove Part of Headwalls Lump Sum
 Plug Ends of Existing Culvert 2-12" Vit. Stoppers

C-2 STA. 602+69

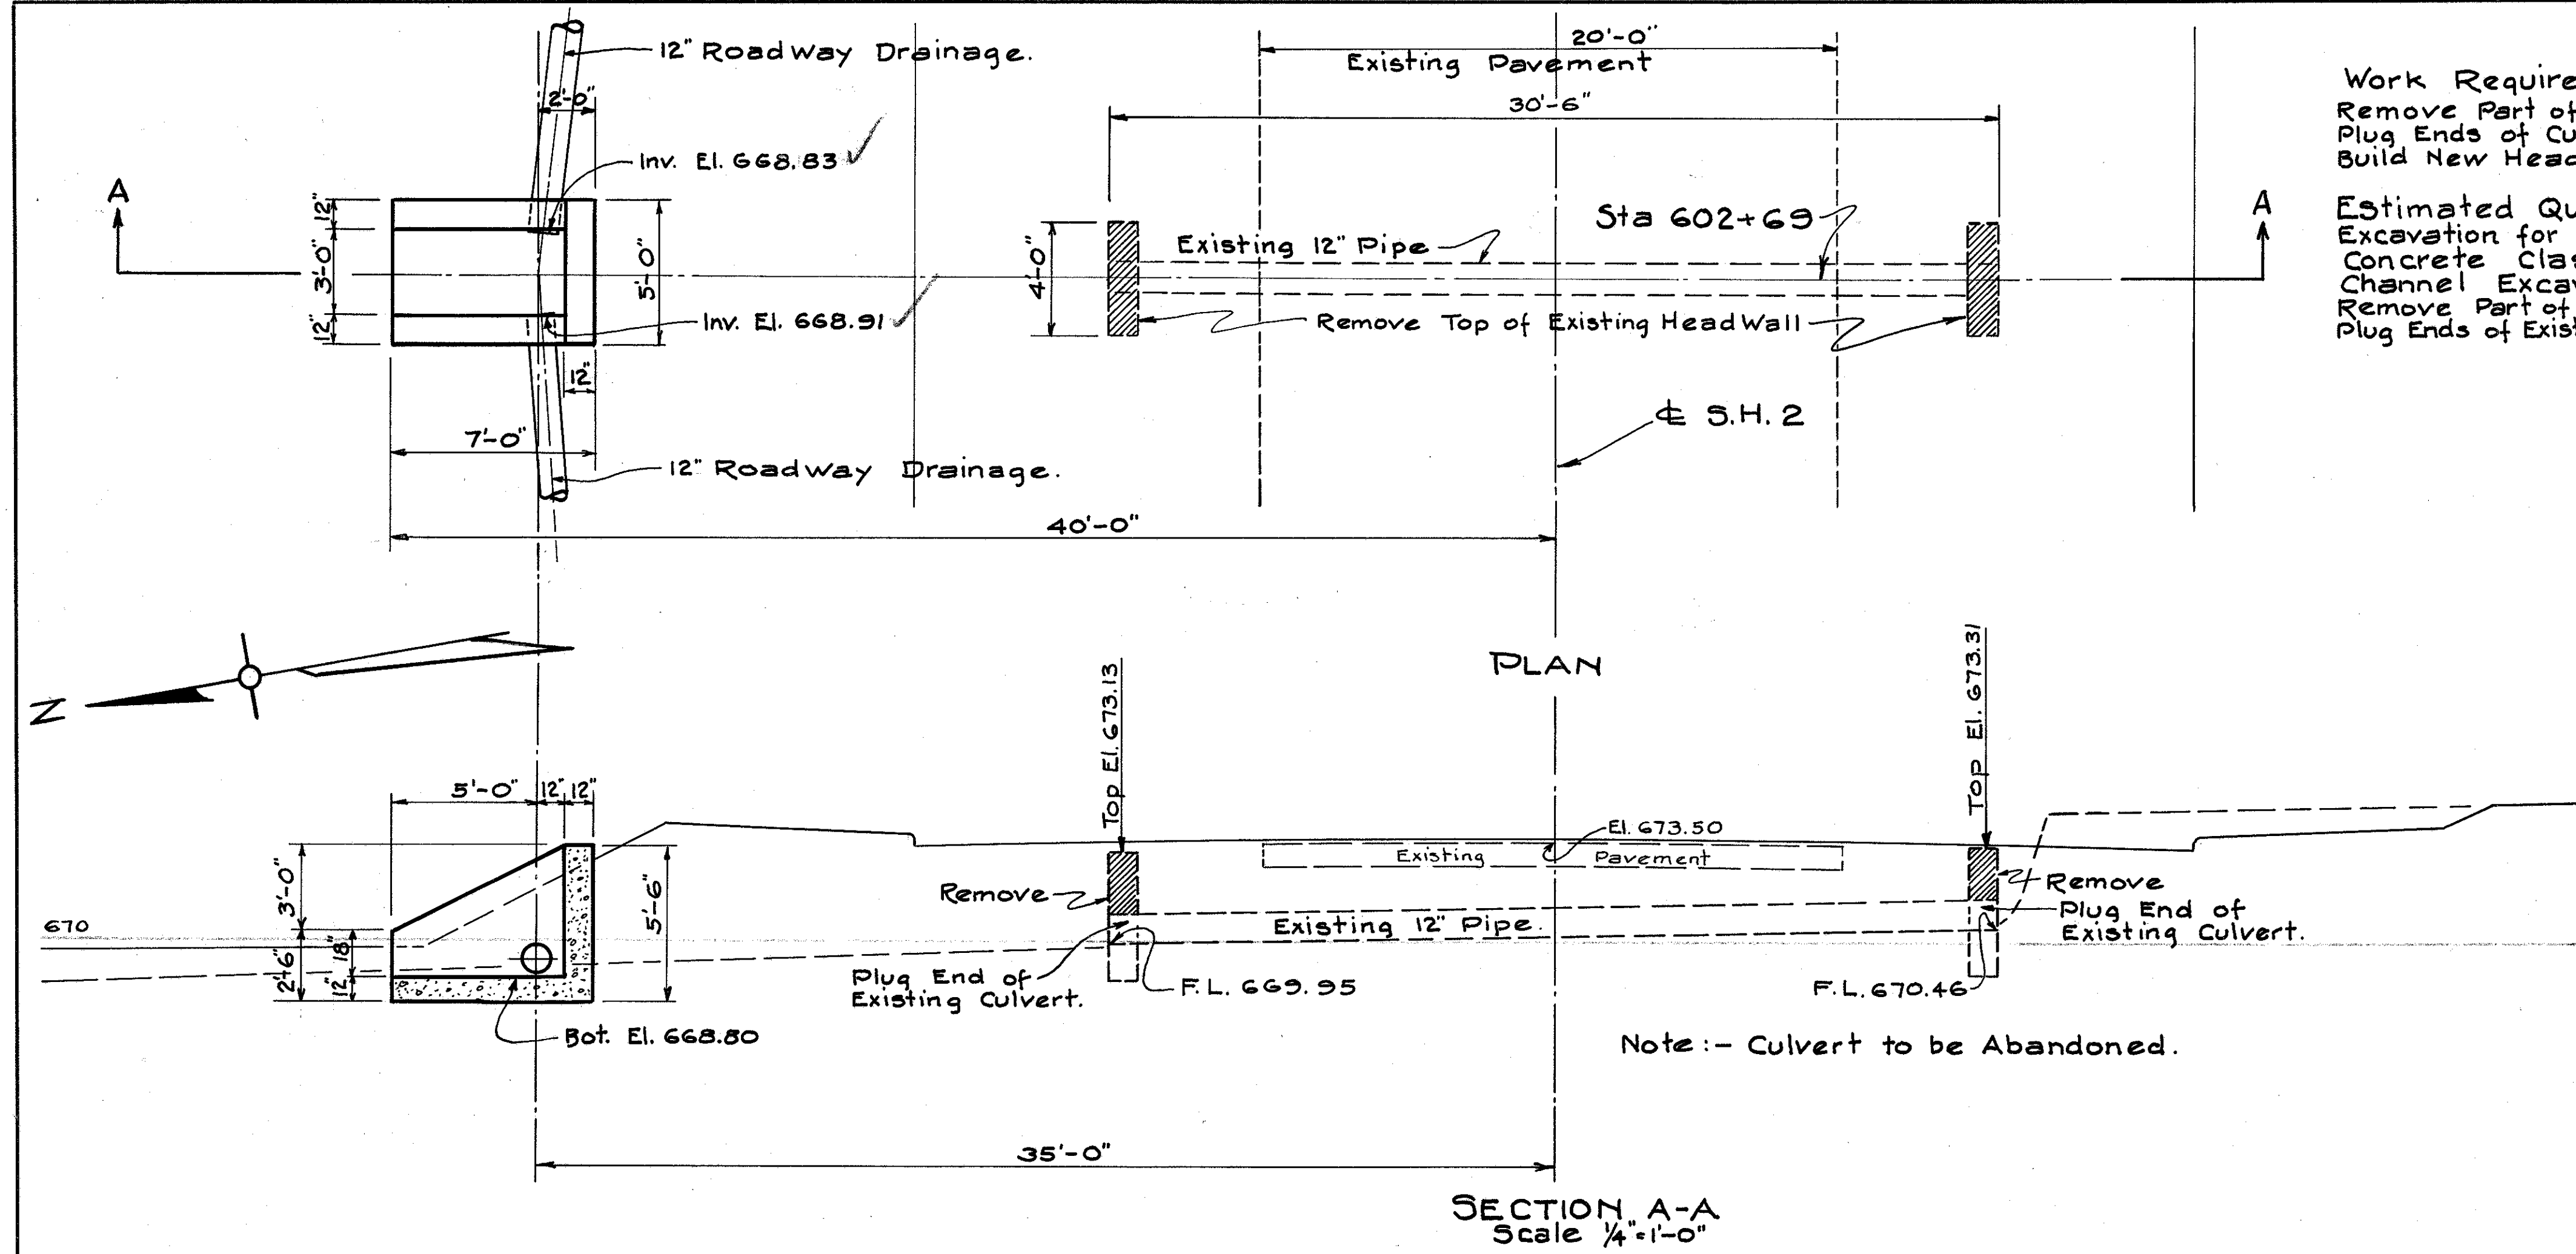

C-1 STA. 583+16.5

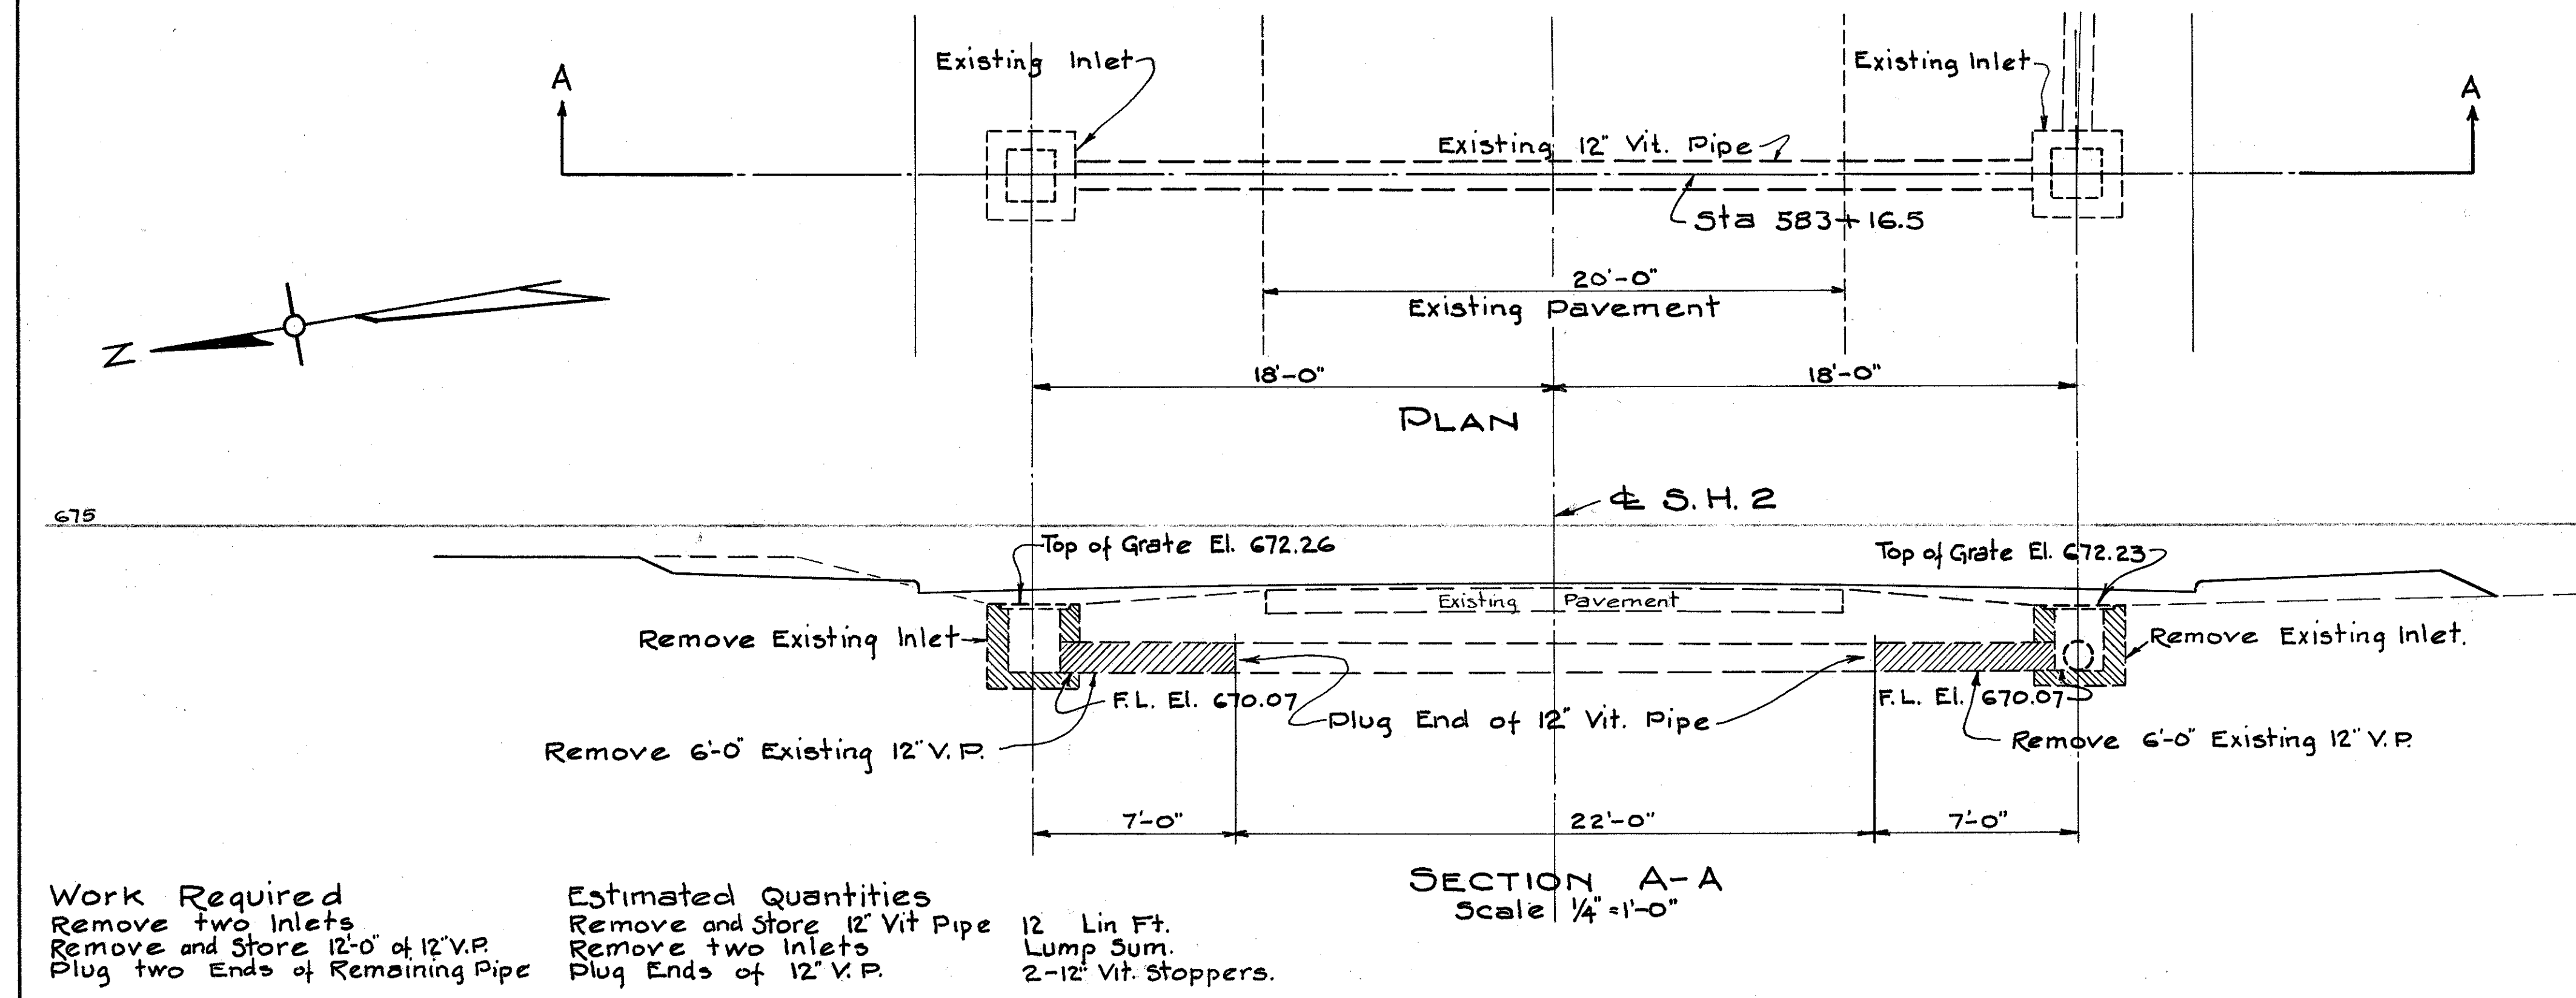

Work Required
 Remove two Inlets
 Remove and Store 12'-0" of 12" V.P.
 Plug two Ends of Remaining Pipe

Estimated Quantities
 Remove and Store 12" Vit Pipe 12 Lin Ft.
 Remove two Inlets Lump Sum.
 Plug Ends of 12" V.P. 2-12" Vit. Stoppers.